


# Wiring Diagram Type 928S Model 88 page 10

MOTOR, FUEL AND IGNITION,  
CRUISE CONTROL  
COORDINATES

81- 90

[illegible]

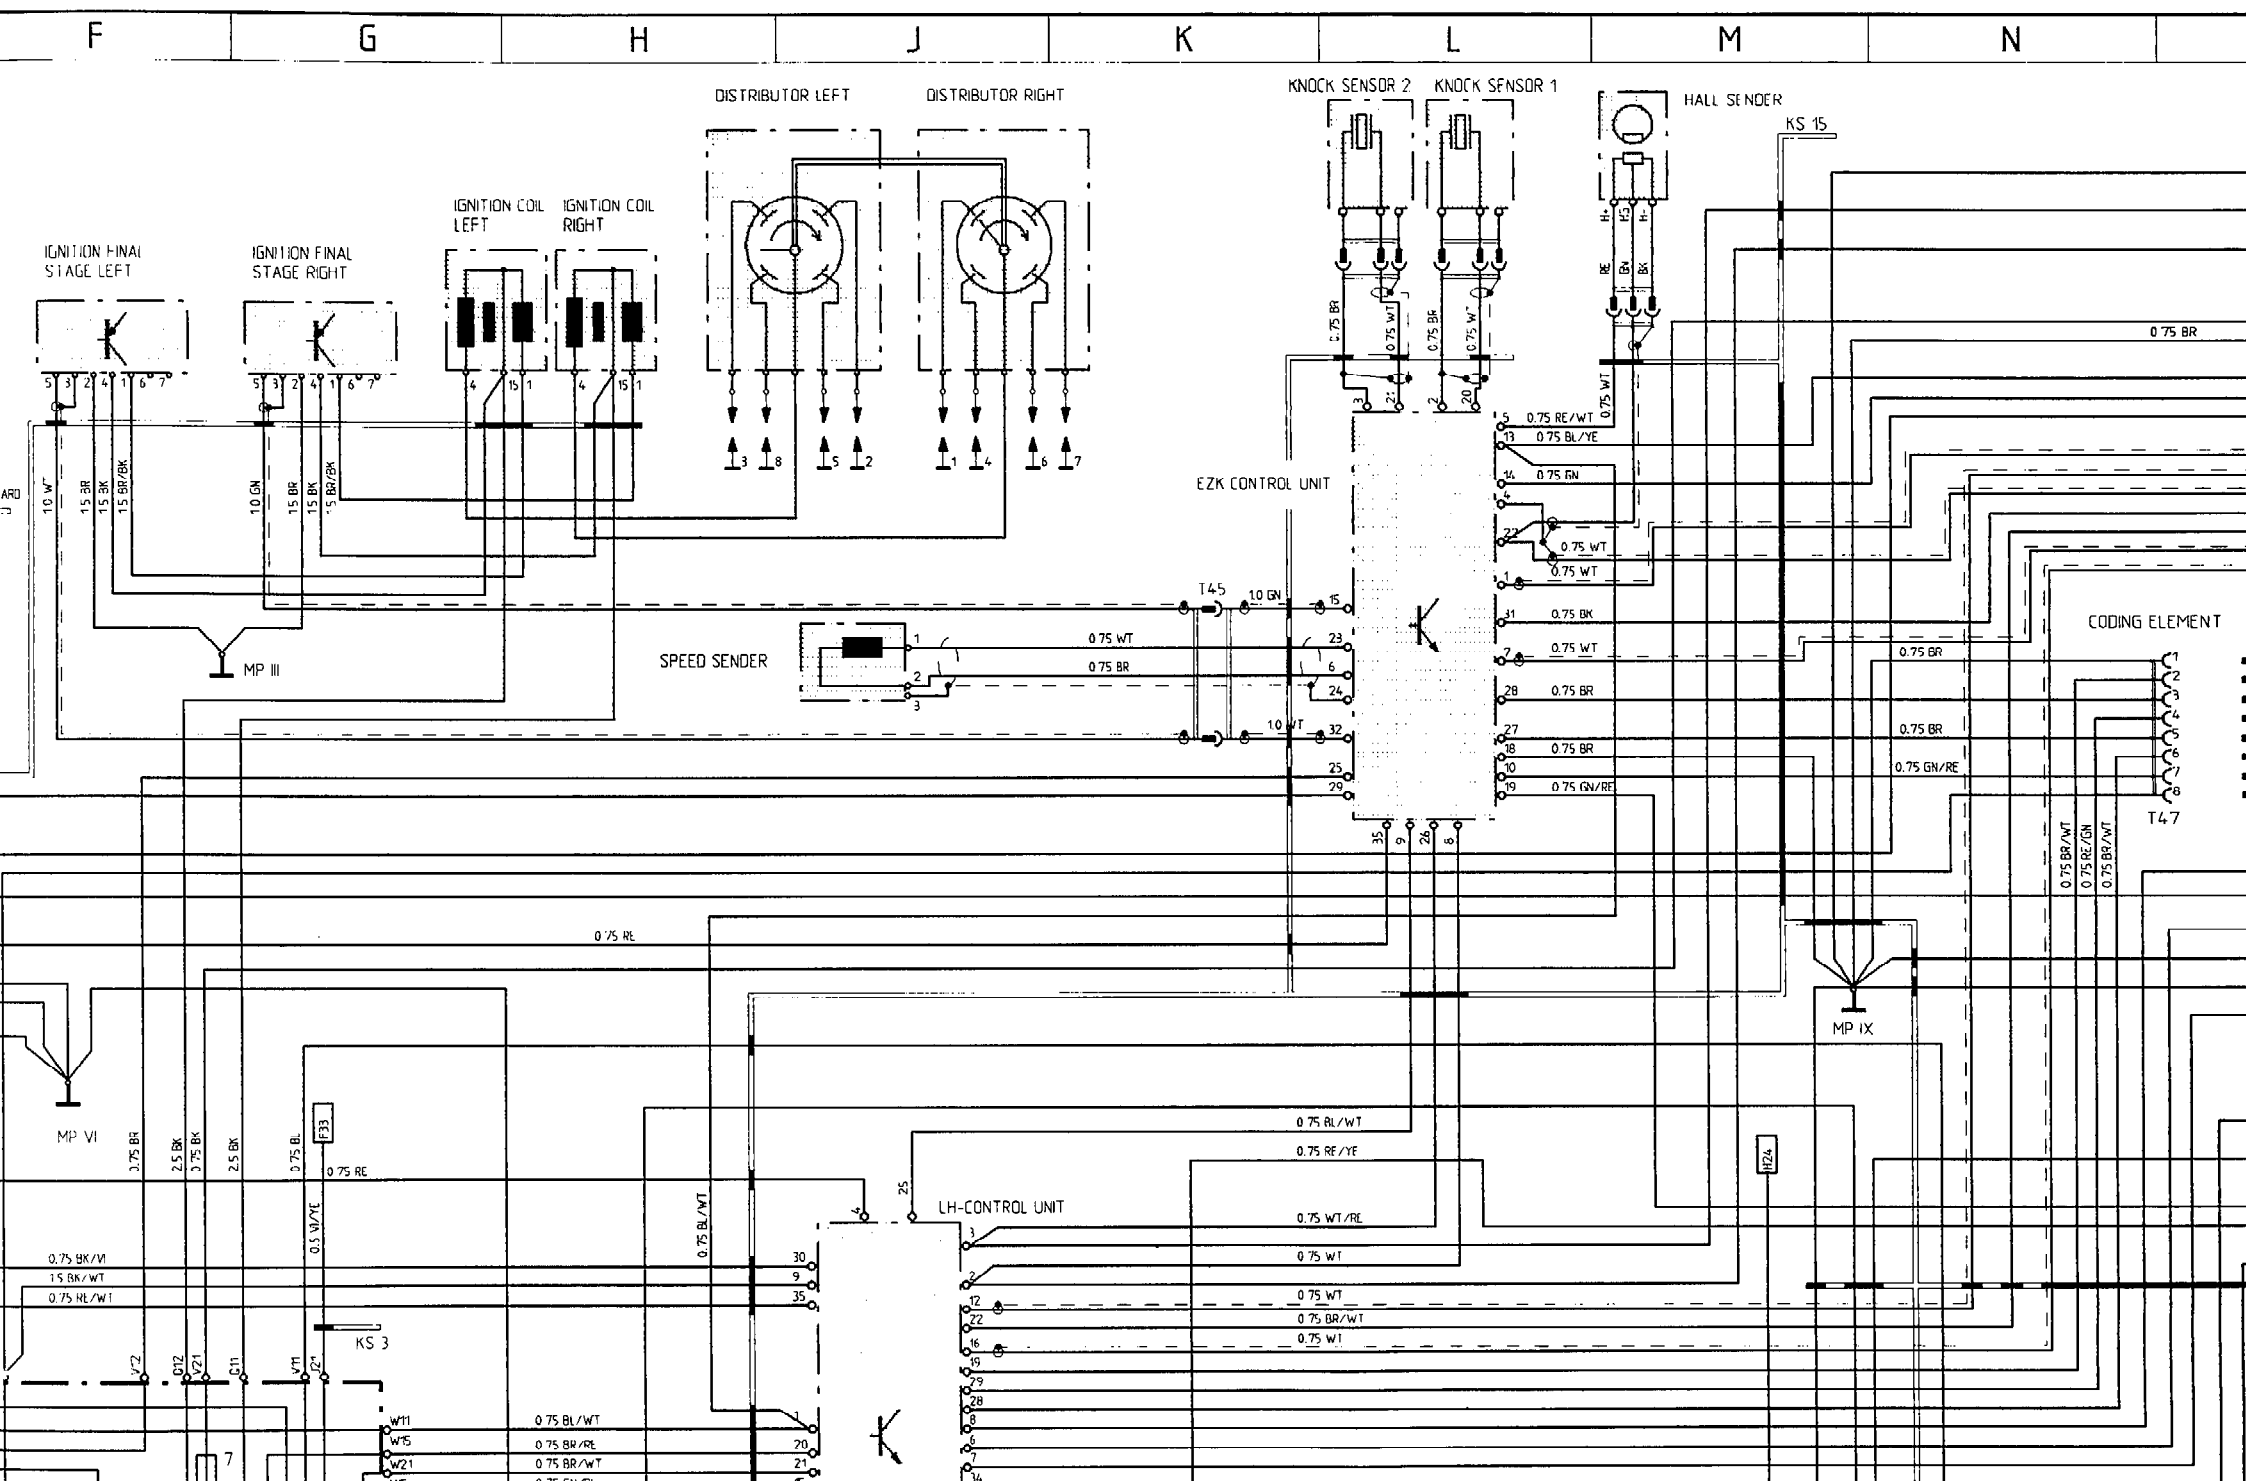

# Wiring Diagram Type 928S Model 88 page 11

CENTRAL ELECTRIC

COORDINATES

91-100

Diagram illustrating the fuse box layout and wiring connections for a vehicle, organized by fuse number and function.

**Fuse Box Layout (Top):**

- Row 1 (A-H):** Fuses 1-25, including 1-8 (B), 9-15 (C), 16-22 (D), 23-25 (E), 26-32 (F), 33-39 (G), 40-46 (H).
- Row 2 (A-H):** Fuses 47-53, including 47-53 (A), 54-60 (B), 61-67 (C), 68-74 (D), 75-81 (E), 82-88 (F), 89-95 (G), 96-102 (H).

**Fuse Functions and Connections:**

- 1 CENTRAL LOCKS:** F12, 5A, X
- 2 CIGAR LIGHTER:** F13, 25A, X
- 3 CONTROL UNIT FAN:** Q14, 5A, XXIII-XXIV X, IV 86, A22
- 4 STOP LIGHT, CRUISE CONTROL:** F21, 7.5A, X
- 5 WINDSHIELD WIPERS:** VII 15, Q11, 25A, X
- 6 AIR CONDITIONING SYSTEM:** G13, 7.5A, IV 87, D14
- 7 LIGHTS, LIGHT SWITCH BUTTON PANEL, RELAY, TIMING CONTROL UNIT, INSIDE LIGHTS, DIAGNOSIS CONNECTION TERM 15:** V21, J22, 5A, 15A, 15
- 8 SEAT HEATER:** H21, 15A, I-8 15, B12
- 9:** 5A, B11
- 10 INSTRUMENT, CONTROL LAMPS KICKDOWN, SOLENOID VALVE SWITCH FOR REAR WINDOW WIPER:** B14, J14, 5A, Q11
- 11 REAR WINDOW WIPER:** T24, 7.5A, Q12
- 12 BACKUP LAMP, MIRROR:** XX1 30, F14, 7.5A, XVII 15, XX 86, XV 15
- 13 ADD AC:** H12, 15A, X
- 14 SUN ROOF:** G24, 25A, VI 87
- 15 POWER WINDOW REGULATOR:** G23, 30A, VI 87
- 16 ABS:** XVI 30, 15A, U11, XVI 30
- 17 FRESH AIR BLOWER:** X 30, 30A, 30
- 18 TWO-TONE HORNS:** XII 30, T25, 15A, A12, A11, IV 30, Q25
- 19 REAR WINDOW DEFOGGER:** I-II 30, 25A, XIV 30, XXV 86
- 20 POWER SEAT LEFT:** G11, 30A, XXII-XXIV 30
- 21 POWER SEAT RIGHT:** G12, 30A, XXII-XXIV 30
- 24 INSIDE LIGHTS DIAGNOSIS CONNECTION:** V22, XI C, E13, 7.5A
- 25 HEADLIGHT CLEANERS:** XIX 30, 25A
- 26 TAILGATE UNLOCKING DRIVE:** U25, 1A
- 27 CONCEALED HEADLIGHT MOTOR:** XXII-XXIV 30A, 15A
- 28 RADIATOR FAN 1:** Q21, 30, S11
- 29 RADIATOR FAN 2:** Q22, 30, S12
- 30 FOG LIGHT:** Q24, 25, 15A, XII 87
- 31 HIGH BEAM LEFT:** O11, 7.5A, XXIII-XXIV 56a, XII 85
- 32 HIGH BEAM RIGHT:** O12, 7.5A, X
- 33 ADDITIONAL HIGH BEAM:** Q22, Q23, 15A, XII 86b, XXII-XXIV 86
- 34 TURN SIGNAL FRONT LEFT:** P11, 5A, C23
- 35 TURN SIGNAL REAR LEFT:** T15, 5A, C24
- 36 TURN SIGNAL FRONT RIGHT:** P12, 5A, C24
- 37 TURN SIGNAL REAR RIGHT:** T21, 5A, C24
- 38 LOW BEAM LEFT:** O13, 7.5A, H24, XXII-XXIV 56b
- 39 LOW BEAM RIGHT:** O14, 7.5A, H24, XXII-XXIV 56b
- 40 SIDE MARKER LIGHT LEFT:** S24, 5A, C15
- 41 SIDE MARKER LIGHT RIGHT:** S23, 5A, C21
- 42 FUEL PUMP HEATER OX. SENSOR:** U15, 15A, XX 87
- 43 LICENSE PLATE ENGINE COMPARTMENT LIGHTS:** T22, 5A, C13
- 44 ASHTRAY - INSTRUMENT - LIGHTS:** F24, 5A, C13

**Wiring Diagrams:**

- I-II REAR WINDOW DEFOGGER:** Shows connections for the defogger grid and its control switch.
- X FRESH AIR BLOWER:** Shows the blower motor and its control switch.
- XI SUPPRESSOR:** Shows the suppressor circuit.
- XII TWO-TONE HORNS:** Shows the two-tone horn circuit.
- XIX HEADLIGHT CLEANERS:** Shows the headlight cleaner motor and its control switch.
- XX FUEL PUMP:** Shows the fuel pump and its control circuit.