

Wiring Diagram Type 928 S Model 86

PAGE 1	LAMPS ROW
PAGE 1	LAMPS USA
PAGE 2	BODY
PAGE 3	INSTRUMENT CLUSTER + INDICATORS
PAGE 4	VENTILATION, HEATING, AIR CONDITIONING ELECTRICALLY OPERATED SEATS
PAGE 5	RADIO
PAGE 6	ABS, ALARM SYSTEM, TRAILER COUPLING
PAGE 7	ENGINE - DIGITAL ENGINE ELECTRONICS
PAGE 8	CENTRAL ELECTRICAL SYSTEM

Wiring Diagram Type 928 S Model 86

The wiring diagram comprises nine individual wiring diagrams.
They are subdivided into coordinate fields.

Each individual wiring diagram comprises a part of the central electrical system
within a dash-dot frame.

This part of the central electrical system shows all the lines and relays required for
individual wiring diagram.

The ground-connecting points are designated with "MP" and their location is
shown in a vehicle diagram.

The 10-pole plugs on central electrical system are clipped together
from 3 parts.

Part 1, with the cast-on fastening pin, is the "initial element".

Part 2 is the "module element".

Both parts are identified by the digits 1 . . . 5.

Part 3 is a "coding element".

The designations of the plug connections in wiring diagram for central electrical
system refer e. g. from A 11 . . . 15 to the "initial element", from A 21 . . . 26 to
module element.


Wiring Diagram Type 928 S Model 86 page 1

LAMPS ROW

Wiring Diagram Type 928 S Model 86 page 1

LAMPS ROW

Wiring 97

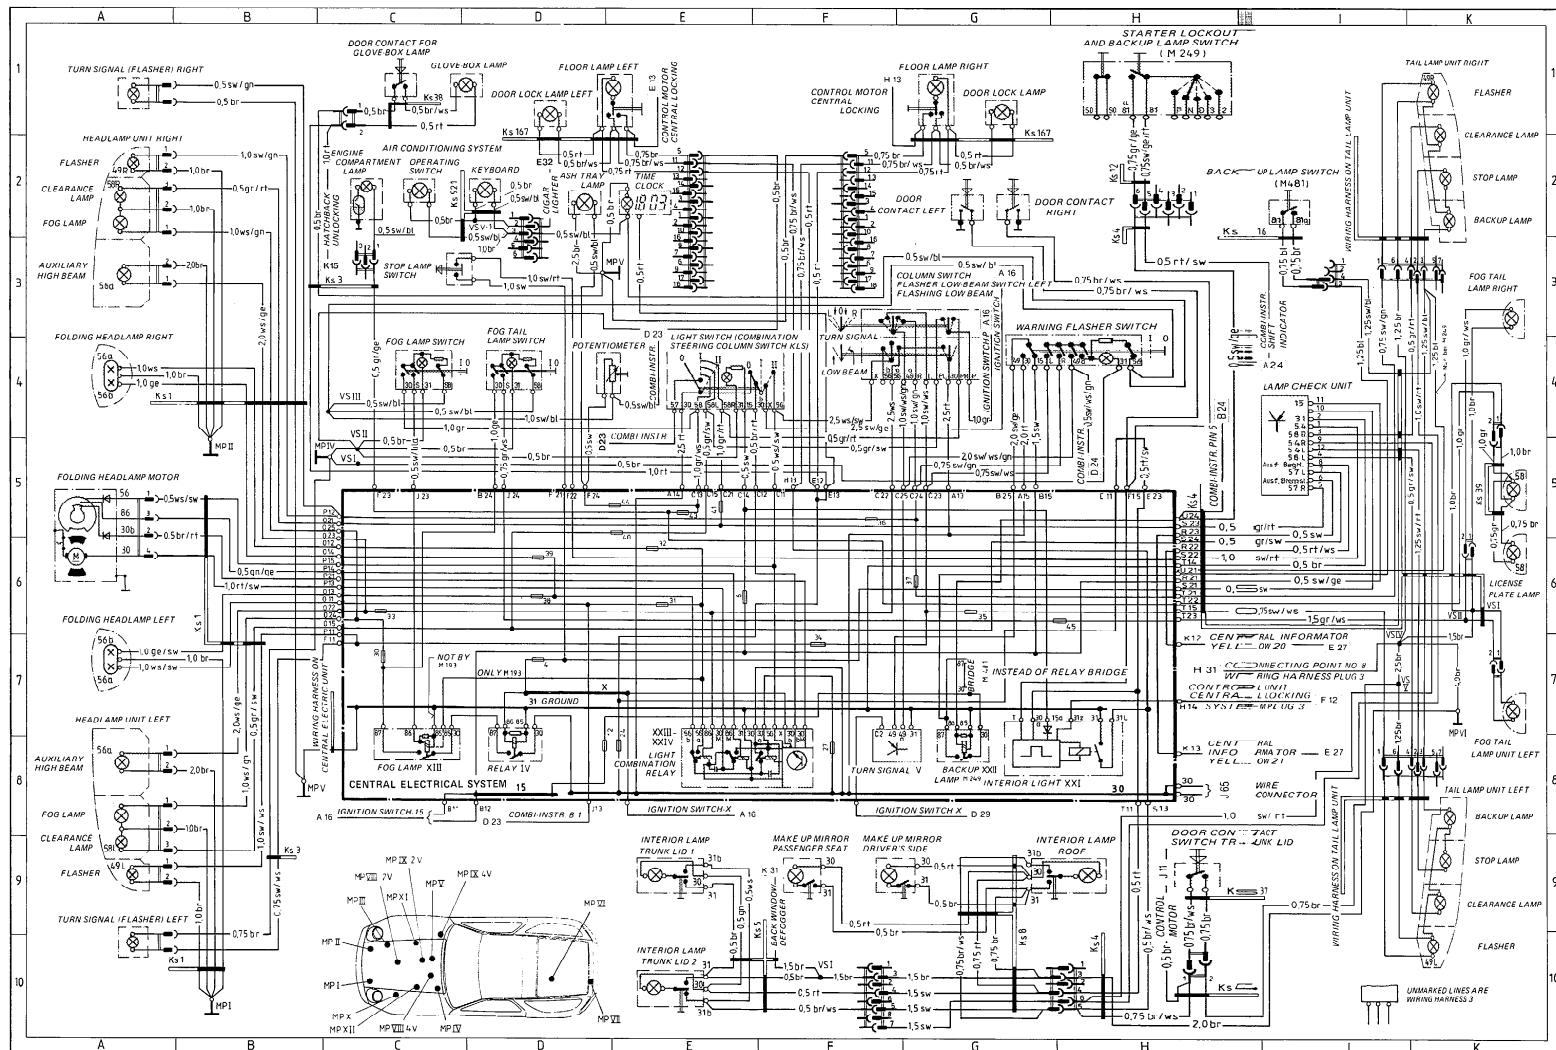


Wiring Diagram Type 928 S Model 86 page 1

LAMPS USA

Wiring Diagram Type 928 S Model 86 page 1

LAMPS USA

Wiring 97

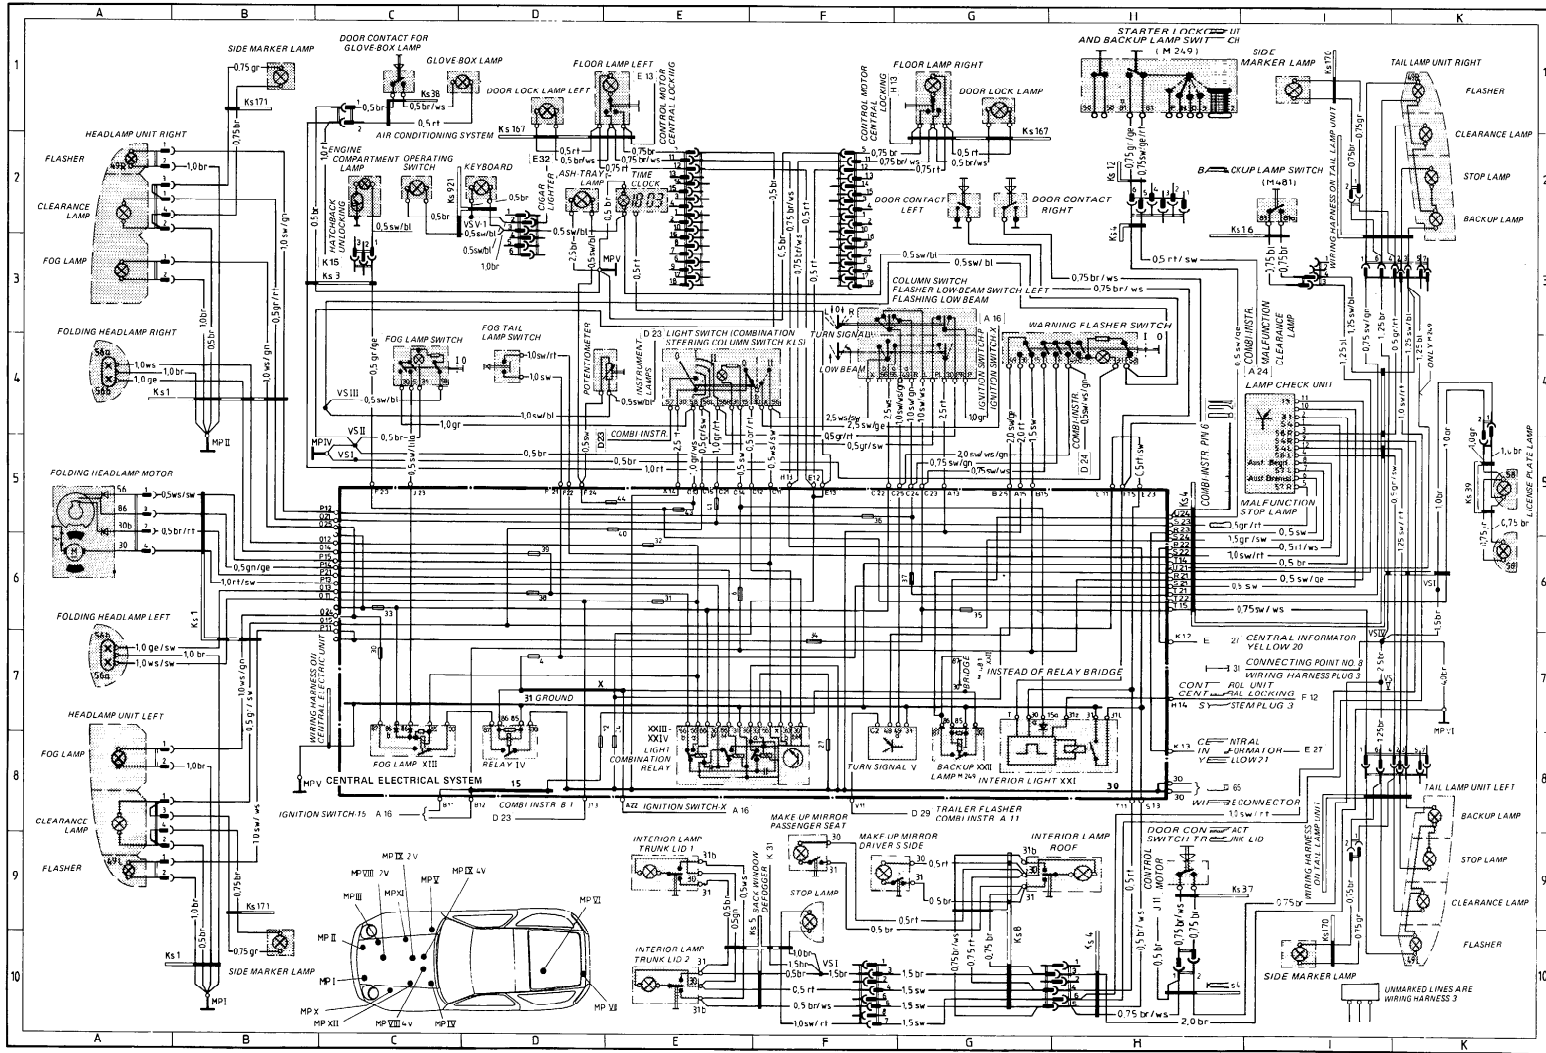

Printed in Germany - XV, 1987

 
Current Flow Diagram 97-237

Wiring Diagram Type 928 S
Model 86 page 2

BODY

BODY

97



SW - BLACK WS - WHITE RT - RED GN - GREEN CE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

MP = GROUND TERMINALS

Current Flow Diagram 97-239

Wiring Diagram Type 928 S Model 86 page 3


INSTRUMENT CLUSTER + INDICATORS

Wiring Diagram Type 928 S Model 86 page 3

INSTRUMENT CLUSTER + INDICATORS

Wiring

97

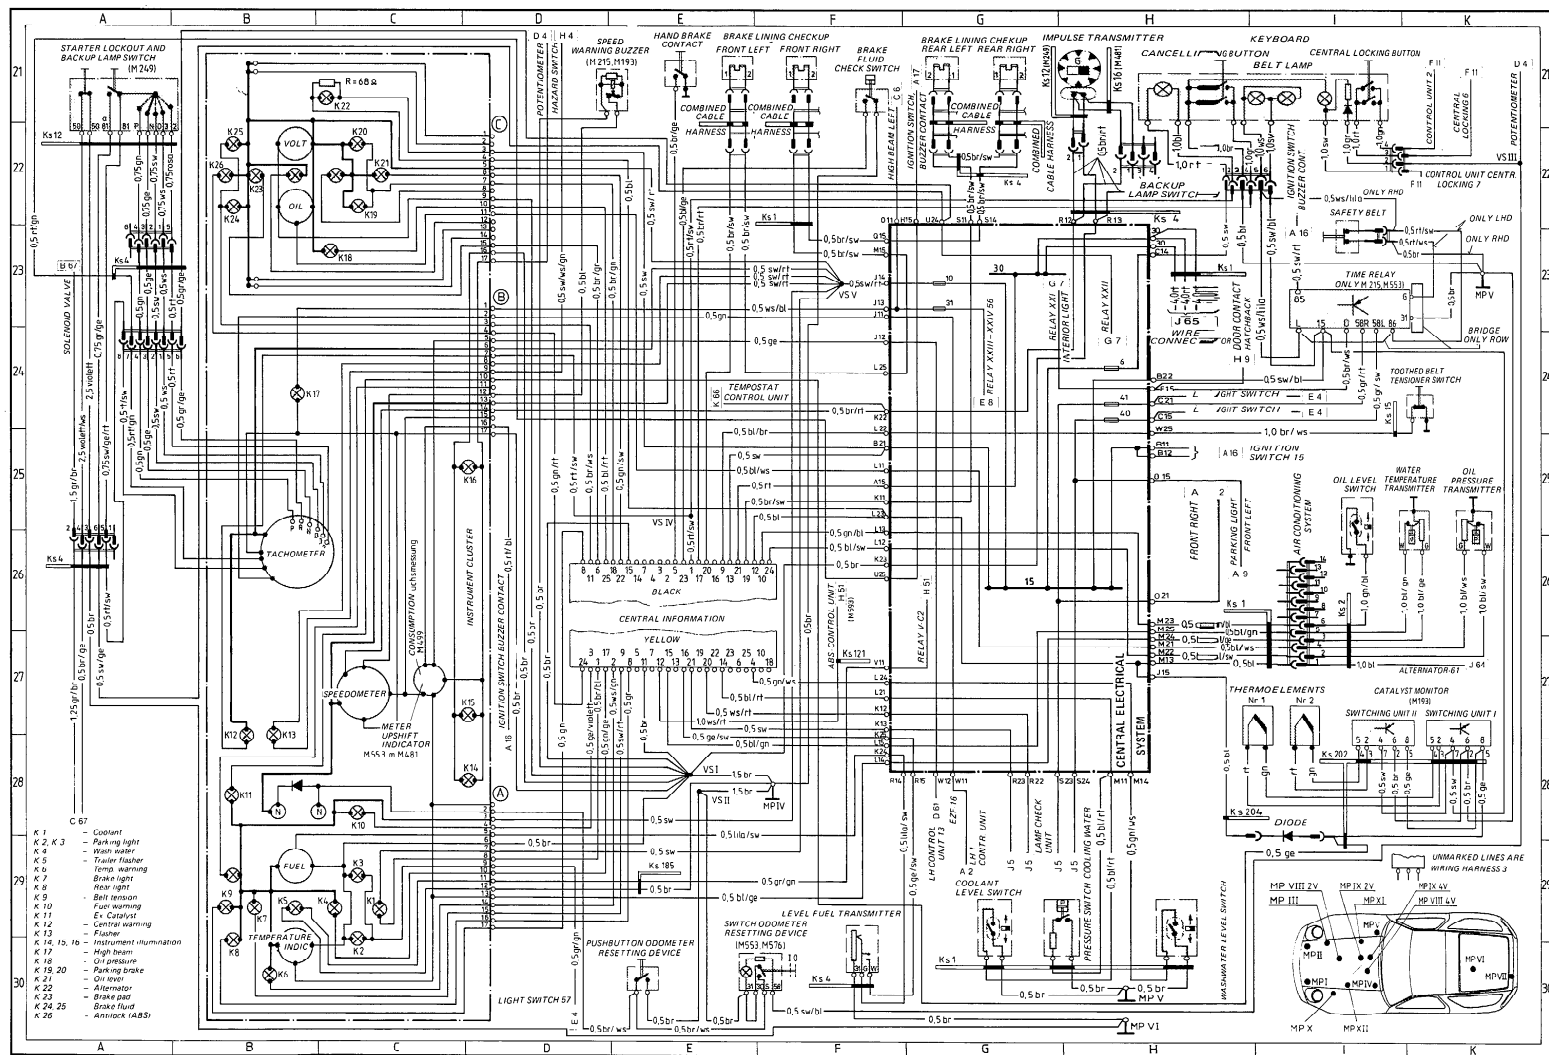

Wiring Diagram Type 928 S Model 86 page 4

VENTILATION, HEATING, AIR CONDITIONING
ELECTRICALLY OPERATED SEATS

VENTILATION, HEATING, AIR CONDITIONING ELECTRICALLY OPERATED SEATS

97



SW = BLACK WS = WHITE RT = RED GN = GREEN GE = YELLOW GR = GREY BR = BROWN BL = BLUE LI = VIOLET **MP = GROUND TERMINALS**

Current Flow Diagram 97-243


Wiring Diagram Type 928 S
Model 86 page 5

RADIO

Wiring Diagram Type 928 S Model 86 page 5

RADIO

Wiring 97

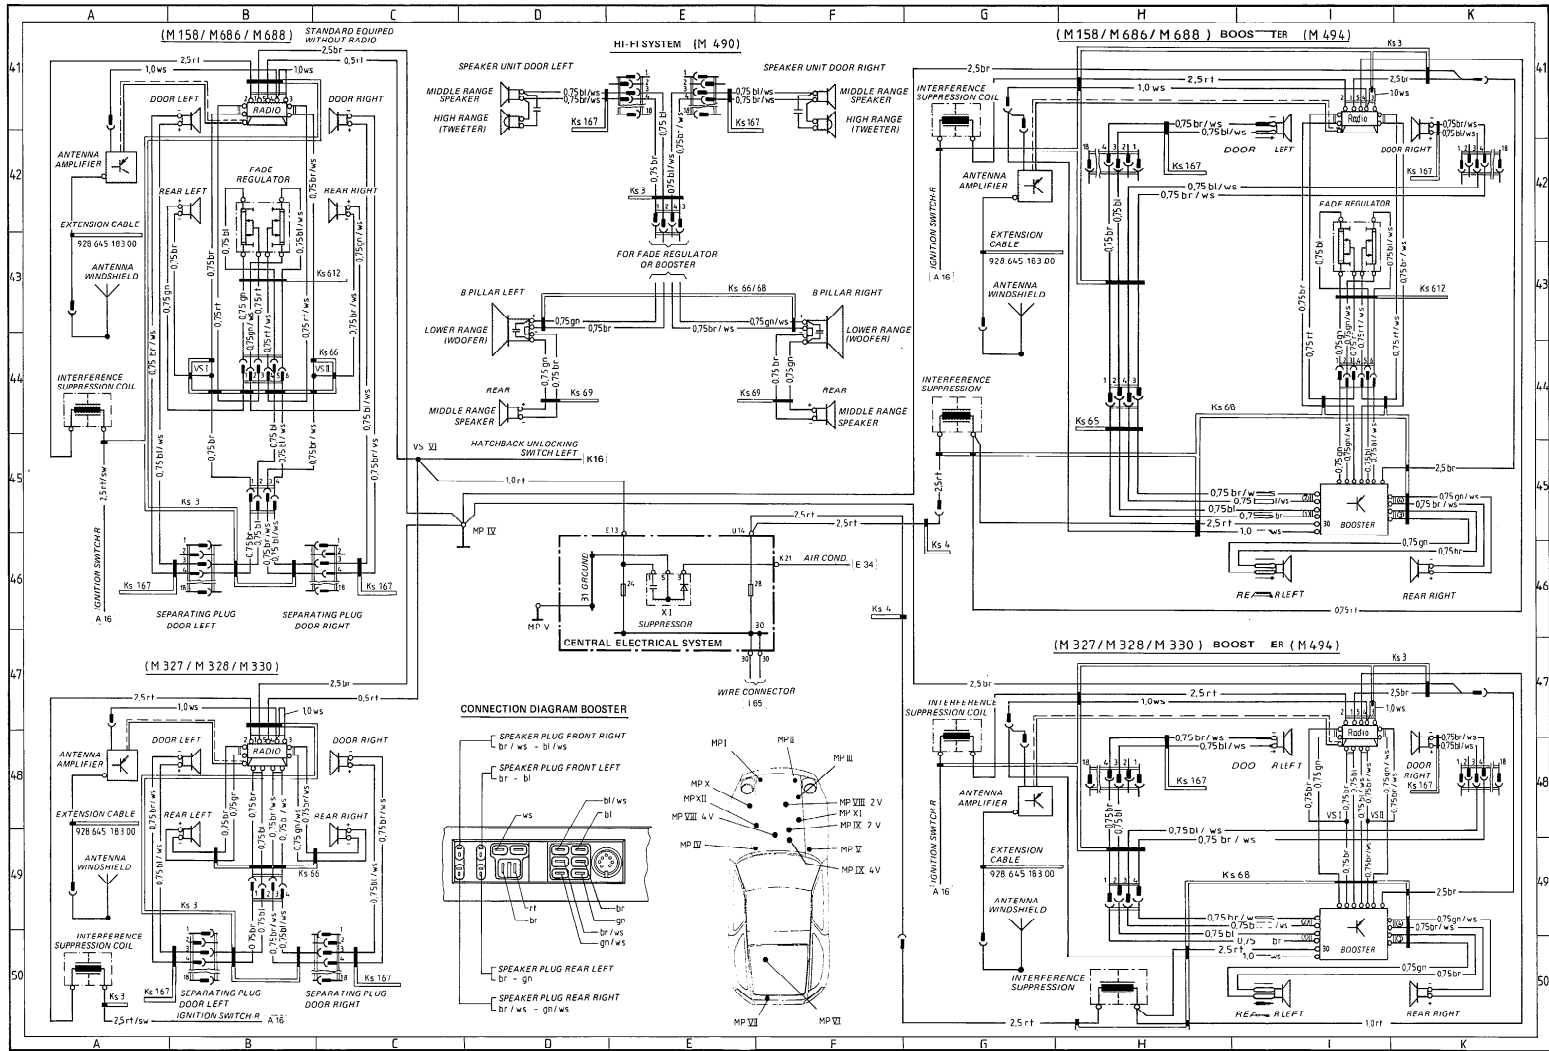

Printed in Germany - XI, 1985

SW - BLACK WS - WHITE RT - RED GN - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET MP = GROUND TERMINALS

Current Flow Diagram 97-245


Wiring Diagram Type 928 S Model 86 page 6

ABS, ALARM SYSTEM, TRAILER COUPLING

Wiring Diagram Type 928 S Model 86 page 6

ABS, ALARM SYSTEM, TRAILER COUPLING

Wiring 97

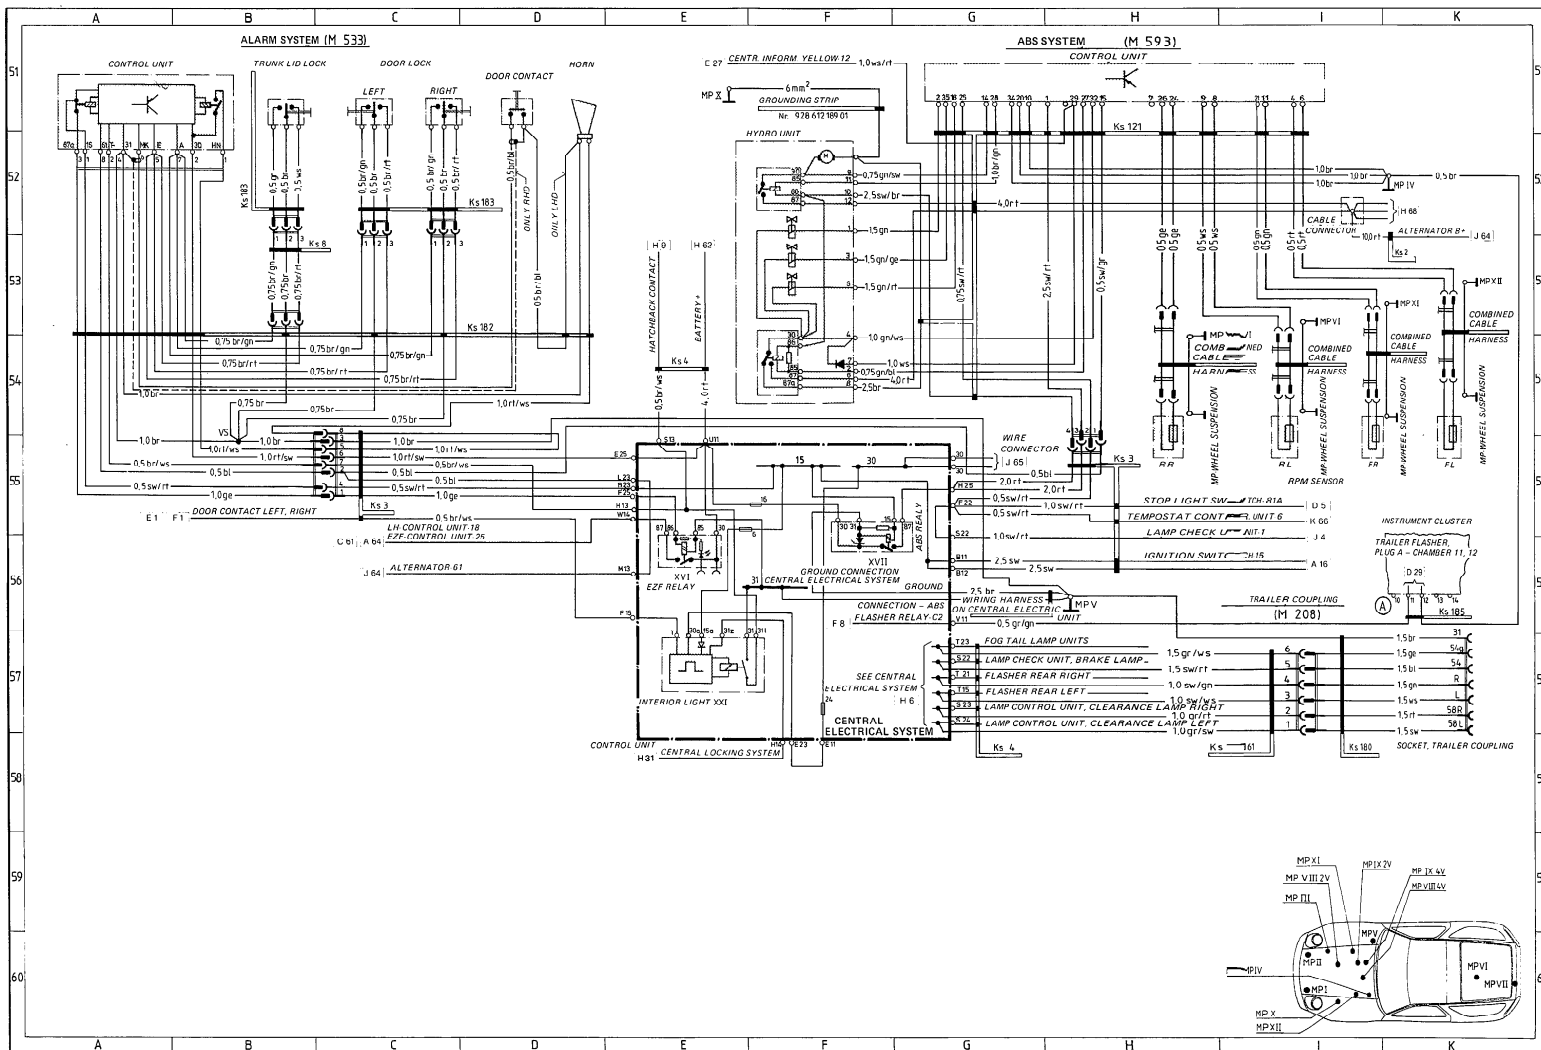

Printed in Germany-XI, 1985

SW - BLACK WS - WHITE RT - RED GN - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

MP = GROUND TERMINALS

Current Flow Diagram 97-247


Wiring Diagram Type 928 S Model 86 page 7

ENGINE - DIGITAL ENGINE ELECTRONICS

Wiring Diagram Type 928 S Model 86 page 7

ENGINE - DIGITAL ENGINE ELECTRONICS

Wiring 97

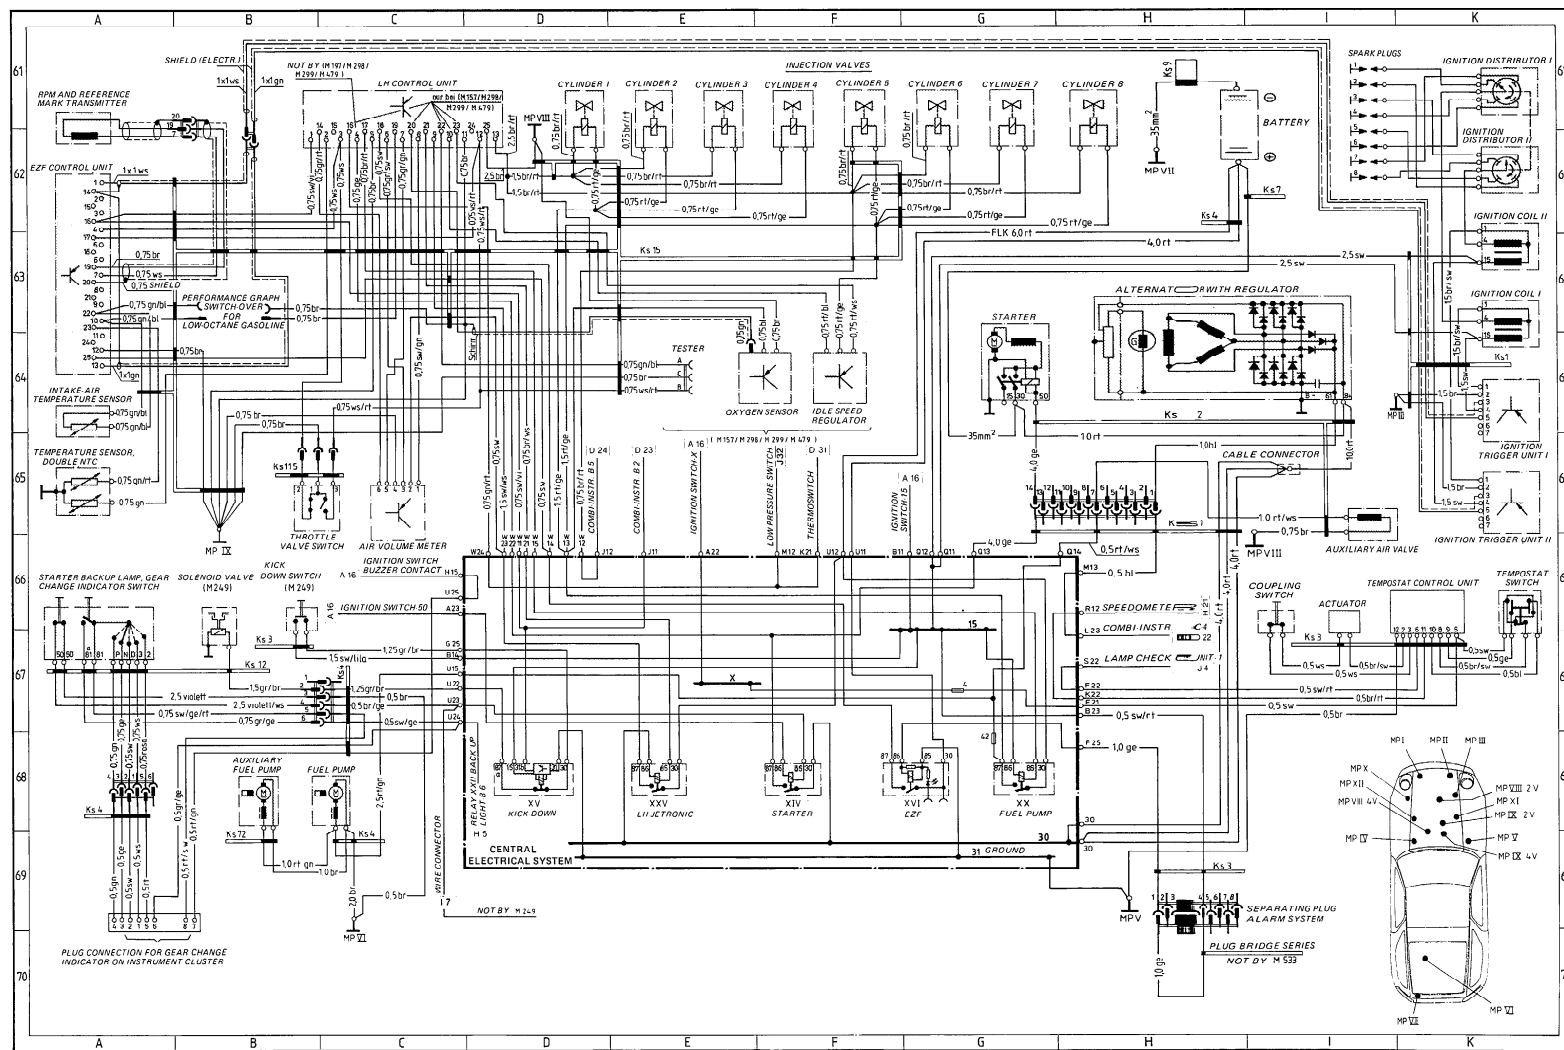

Printed in Germany - XI, 1985

SW - BLACK WS - WHITE RT - RED GN - GREEN GE - YELLOW GR - GRFY BR - BROWN BL - BLUE LI - VIOLET

MP = GROUND TERMINALS

Current Flow Diagram 97-24


Wiring Diagram Type 928 S Model 86 page 8

CENTRAL ELECTRICAL SYSTEM

Wiring Diagram Type 928 S Model 86 page 8

CENTRAL ELECTRICAL SYSTEM

Wiring 97

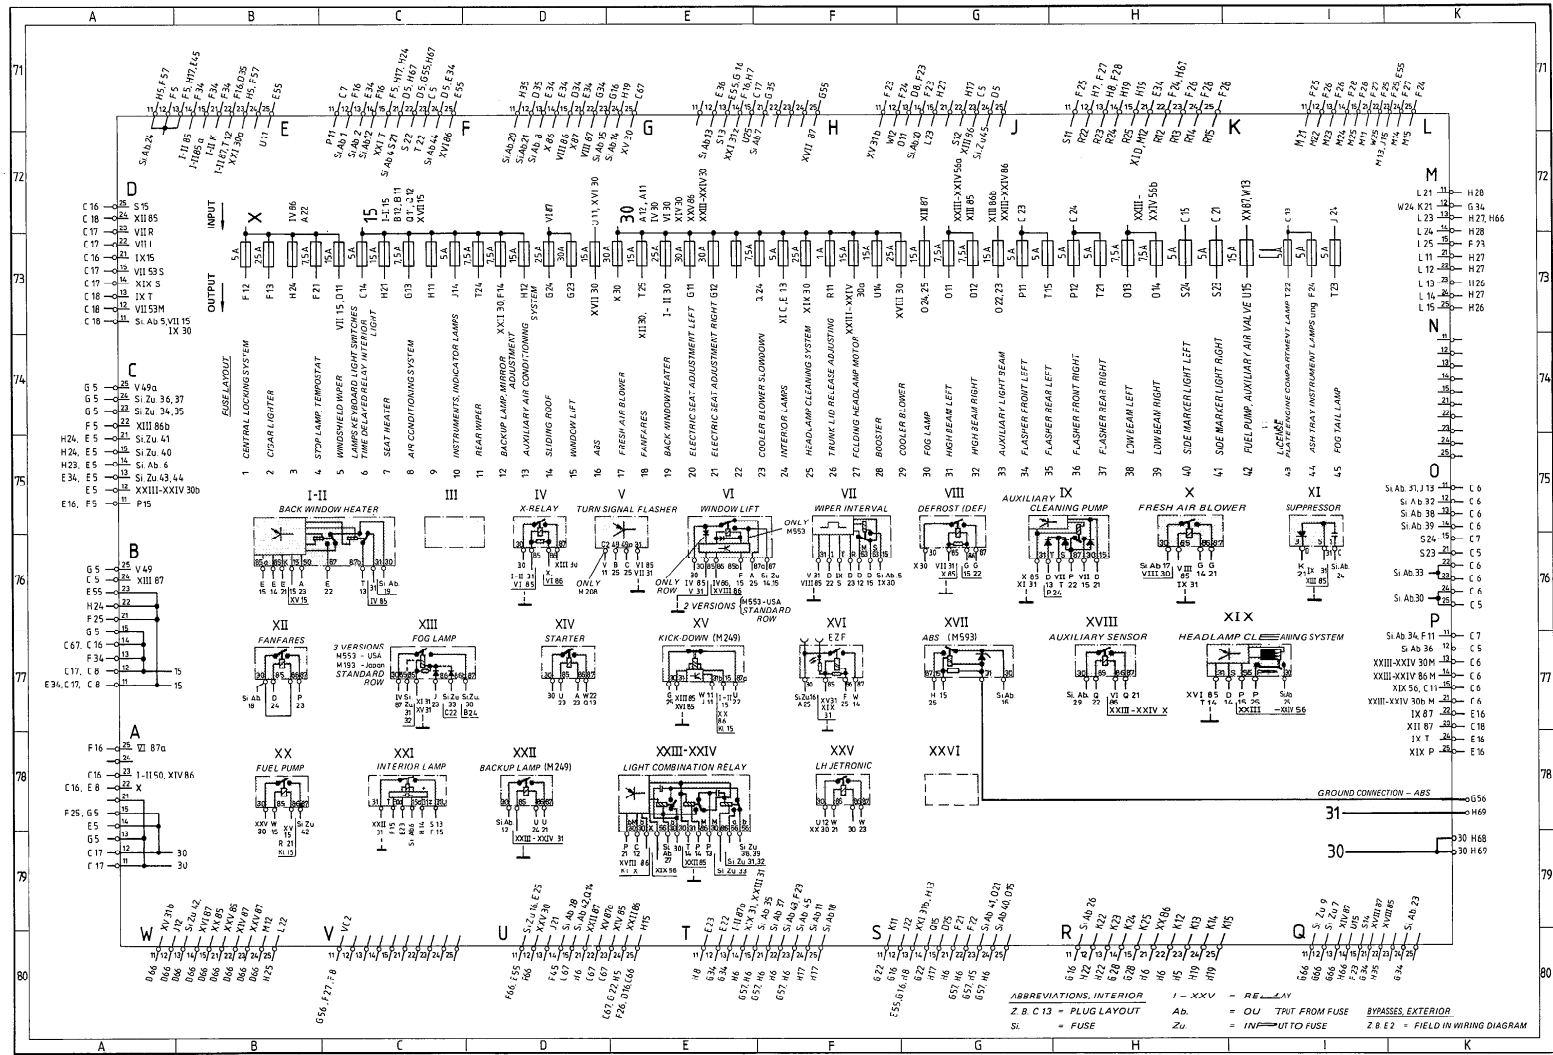

Printed in Germany - XI, 1985

SW - BLACK WS - WHITE RT - RED GN - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET

MP = GROUND TERMINALS

Current Flow Diagram 97-251